

USE & CARE INSTRUCTIONS FOR ULTRA-1 & 2 COLD DRINK DISPENSERS

DISASSEMBLY & CLEANING




1. Unplug the hopper lamp cord(s) and remove the hopper lid(s).




2. Depress the hopper lock plunger, lift slightly.



3. Pull the hopper assembly forward and remove.

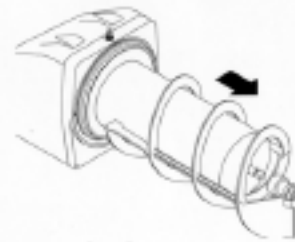


4. Pull the auger from the cooling drum.

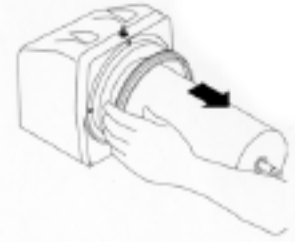

5. Remove the hopper seal from the flange on the cooling drum.




6. **CAUTION:** Faucet valve is under spring tension. Spread one side of the handle first, then the other and disconnect from hopper.

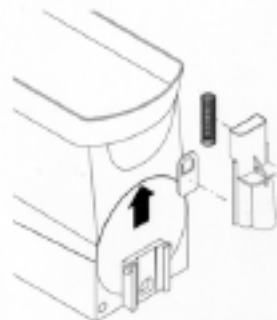


7. Carefully slide valve up to remove spring and faucet seal. Extra care should be taken when handling the seal to prevent damage.



8. Remove the auger nose bushing from inside the front of the hopper.

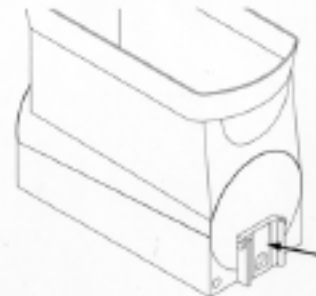

9. Do not scratch this surface when cleaning. Deep scratches could cause leakage around the seal.

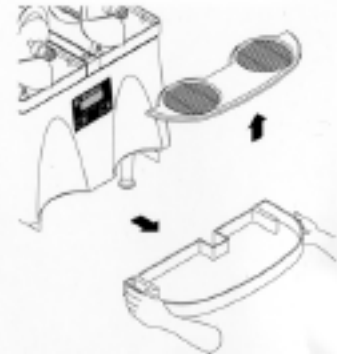

10. Remove the dip tray and cover.

11. Place all parts in a clean sink with mild hot water (120°) and sanitizer solution. Allow all parts to soak for at least 5 minutes. Carefully wash all components with a clean wash cloth in hot water and sanitizer solution. Use a clean, soft bristle brush as needed for the smaller components and tight areas. Do not immerse hopper lids. Use a commercial sanitizer that has 100 ppm of available chlorine with a concentration level of at least 3% available chlorine (KAY-5 Sanitizer). Follow the sanitizer's mixing instructions to ensure 100 ppm of available chlorine.

12. Wash the drum(s), hopper drip tray(s), top cover(s), and other enclosure using a clean wash cloth that has been dampened in the hot water sanitizer solution. Pay particular attention to the shift area and make sure it is thoroughly cleaned and sanitized.

13. Thoroughly rinse all surfaces with a clean wash cloth that has been dampened with hot water. Wipe dry with a clean dry wash cloth before reassembling the dispenser.

Note - Although most parts are dishwasher safe, they may be affected by the chemicals in some commercial sanitizing agents. Do not place the hopper lids in a dishwasher. Rinse thoroughly before assembly.


ASSEMBLY




1. Replace the auger nose bushing inside the front of the hopper.



2. Install the hopper seal over the flange at the cooling drum as shown.

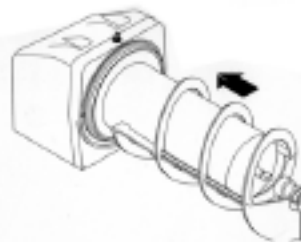


3. Align the auger shafts with the augers. Push the augers as far as they will go and rotate them so the flat face of the auger nose.

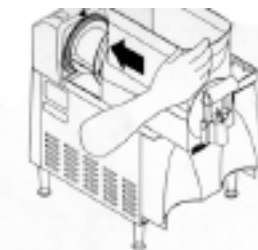

4. Install the hopper over the auger and cooling drum and slide it into place.



5. Push down until the hopper lock plunger snaps into place.

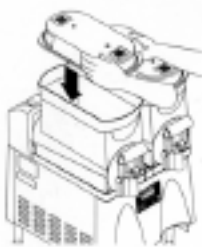

6. Set the hopper lid on the hopper with lamp cord at the back.



7. Plug in the hopper lid lamp cord.



8. Position the faucet seal and the return spring in the faucet valve.



9. Slide the faucet valve assembly into place on the hopper.



10. Press down on the valve to compress the spring. Position the faucet handle over the faucet valve one side at a time and snap into place on the hopper.



11. Install the drip tray cover.

12. Whether liquid concentrate or granulated powder, all product must be thoroughly mixed BEFORE adding it to the the hoppers.